

191400 to 191477

Illustrated Parts List

MODEL SERIES

191400 to 191477

TYPE NUMBERS

0010 to 0041

0110 to 0136


TO FIND

**THE CORRECT NUMBER OF THE PART YOU NEED:
FOLLOW THE INSTRUCTIONS BELOW.**


- A. Refer to Engine Model, Type and Code Number (formerly Serial Number) that is stamped on the blower housing or name plate of engine. Engine type numbers such as 0147 01 are listed herein only as 0147. The two digits (01 or 02, etc.) to the right of the space are not needed for parts identification. Then use the Illustrated Parts List covering these Model Series.
- B. Refer to Illustrated Parts section and compare the old part with illustration. The number on the illustration is the Reference Number. Assemblies include all parts shown in frames. All parts shown in assembly frames on which individual reference numbers are given can be purchased separately.
- C. After the Reference Number has been identified, refer to the Numerical Parts List, where Reference and Master Part Numbers are listed. **THE MASTER PART IS USED ON ALL TYPE NUMBERS EXCEPT THOSE TYPE NUMBERS UNDER "NOTE".**
- D. If a "Note" appears below the Master Part Number, this means that this part differs from the Master Part for certain types. If the Type Number is listed under "Note", order the part referred to.
- E. If the Engine Type Number does not appear after any part number listed under "Note", use the Master Part Number.
- F. For Type Numbers higher than those covered by this book, please refer to the factory if you are unable to identify the part by comparison.



191400 to 191477

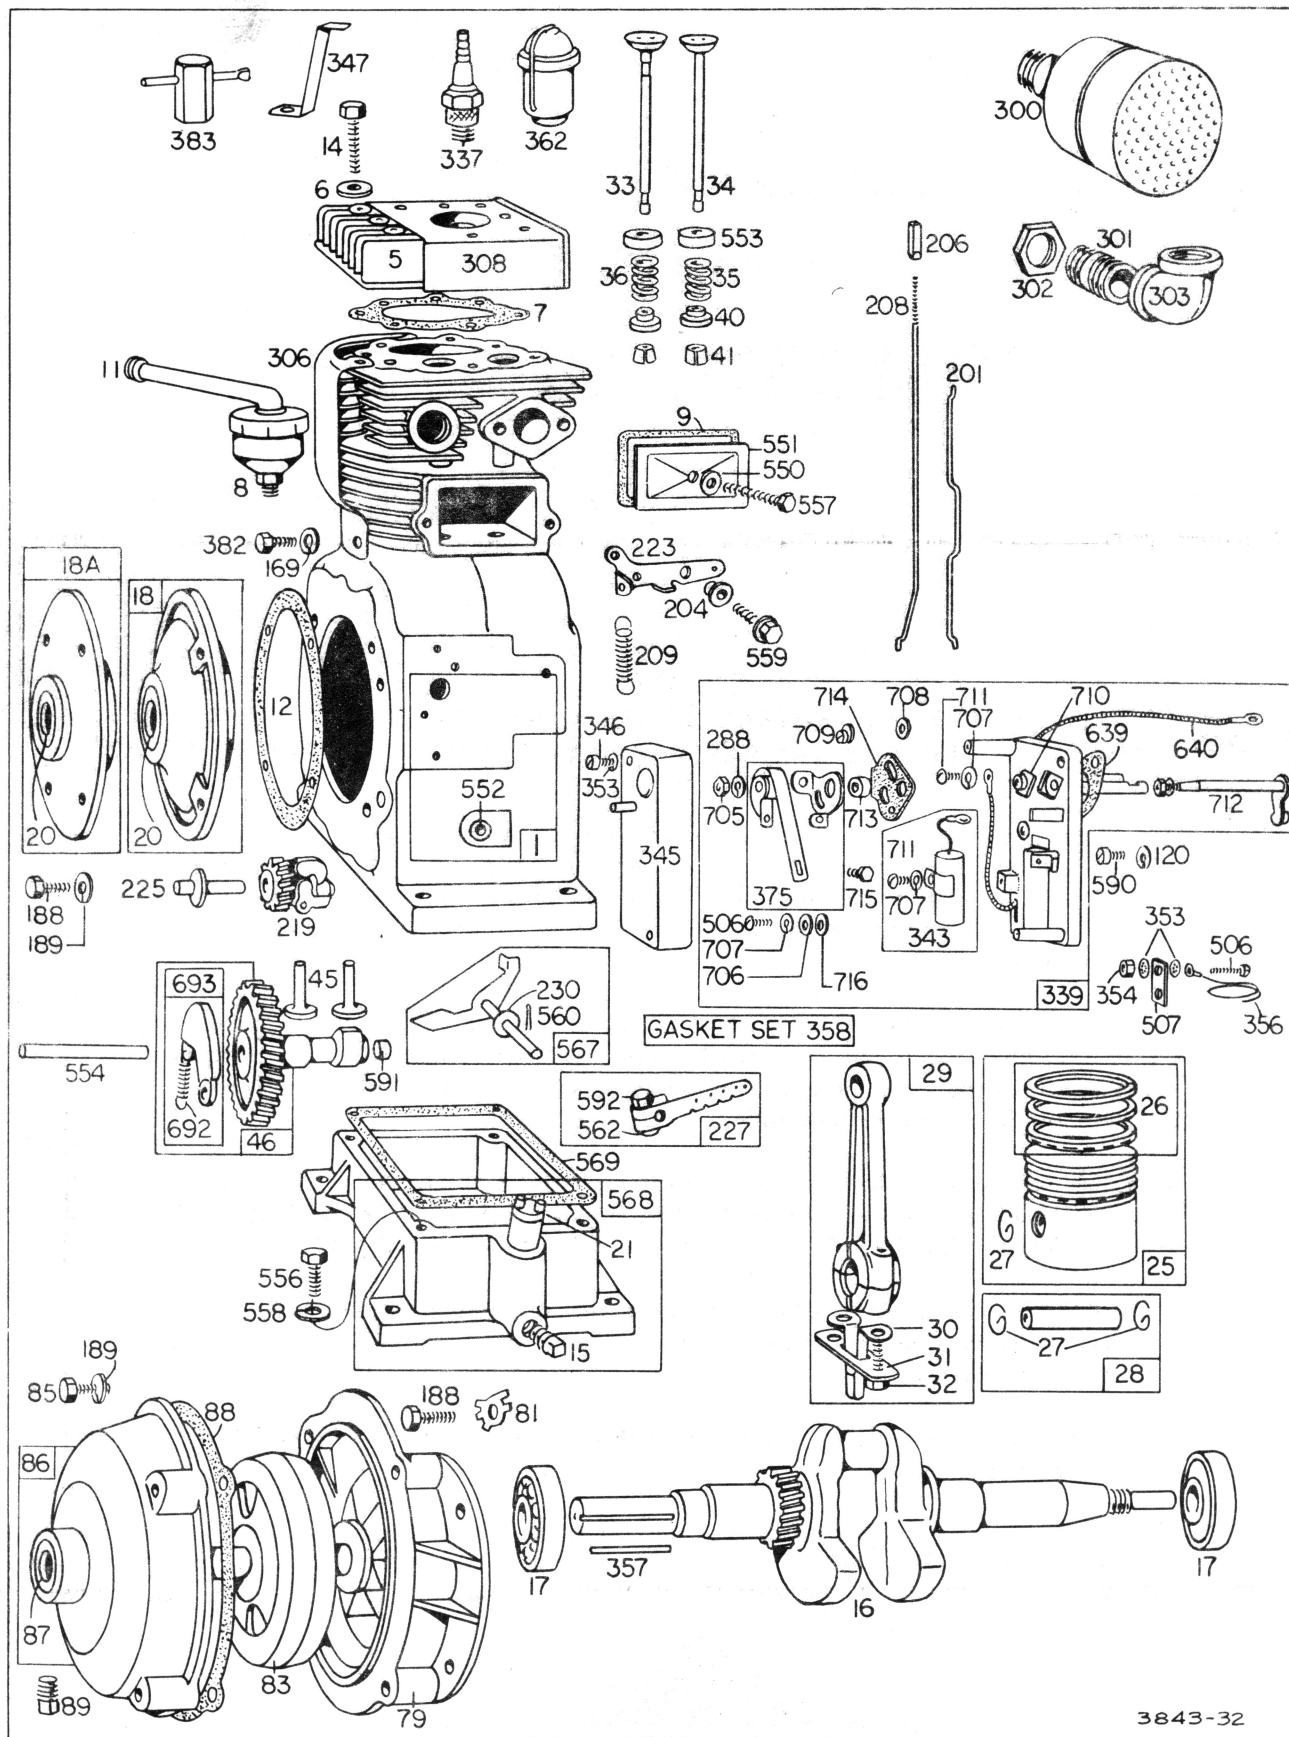

Assemblies include all parts shown in frames.

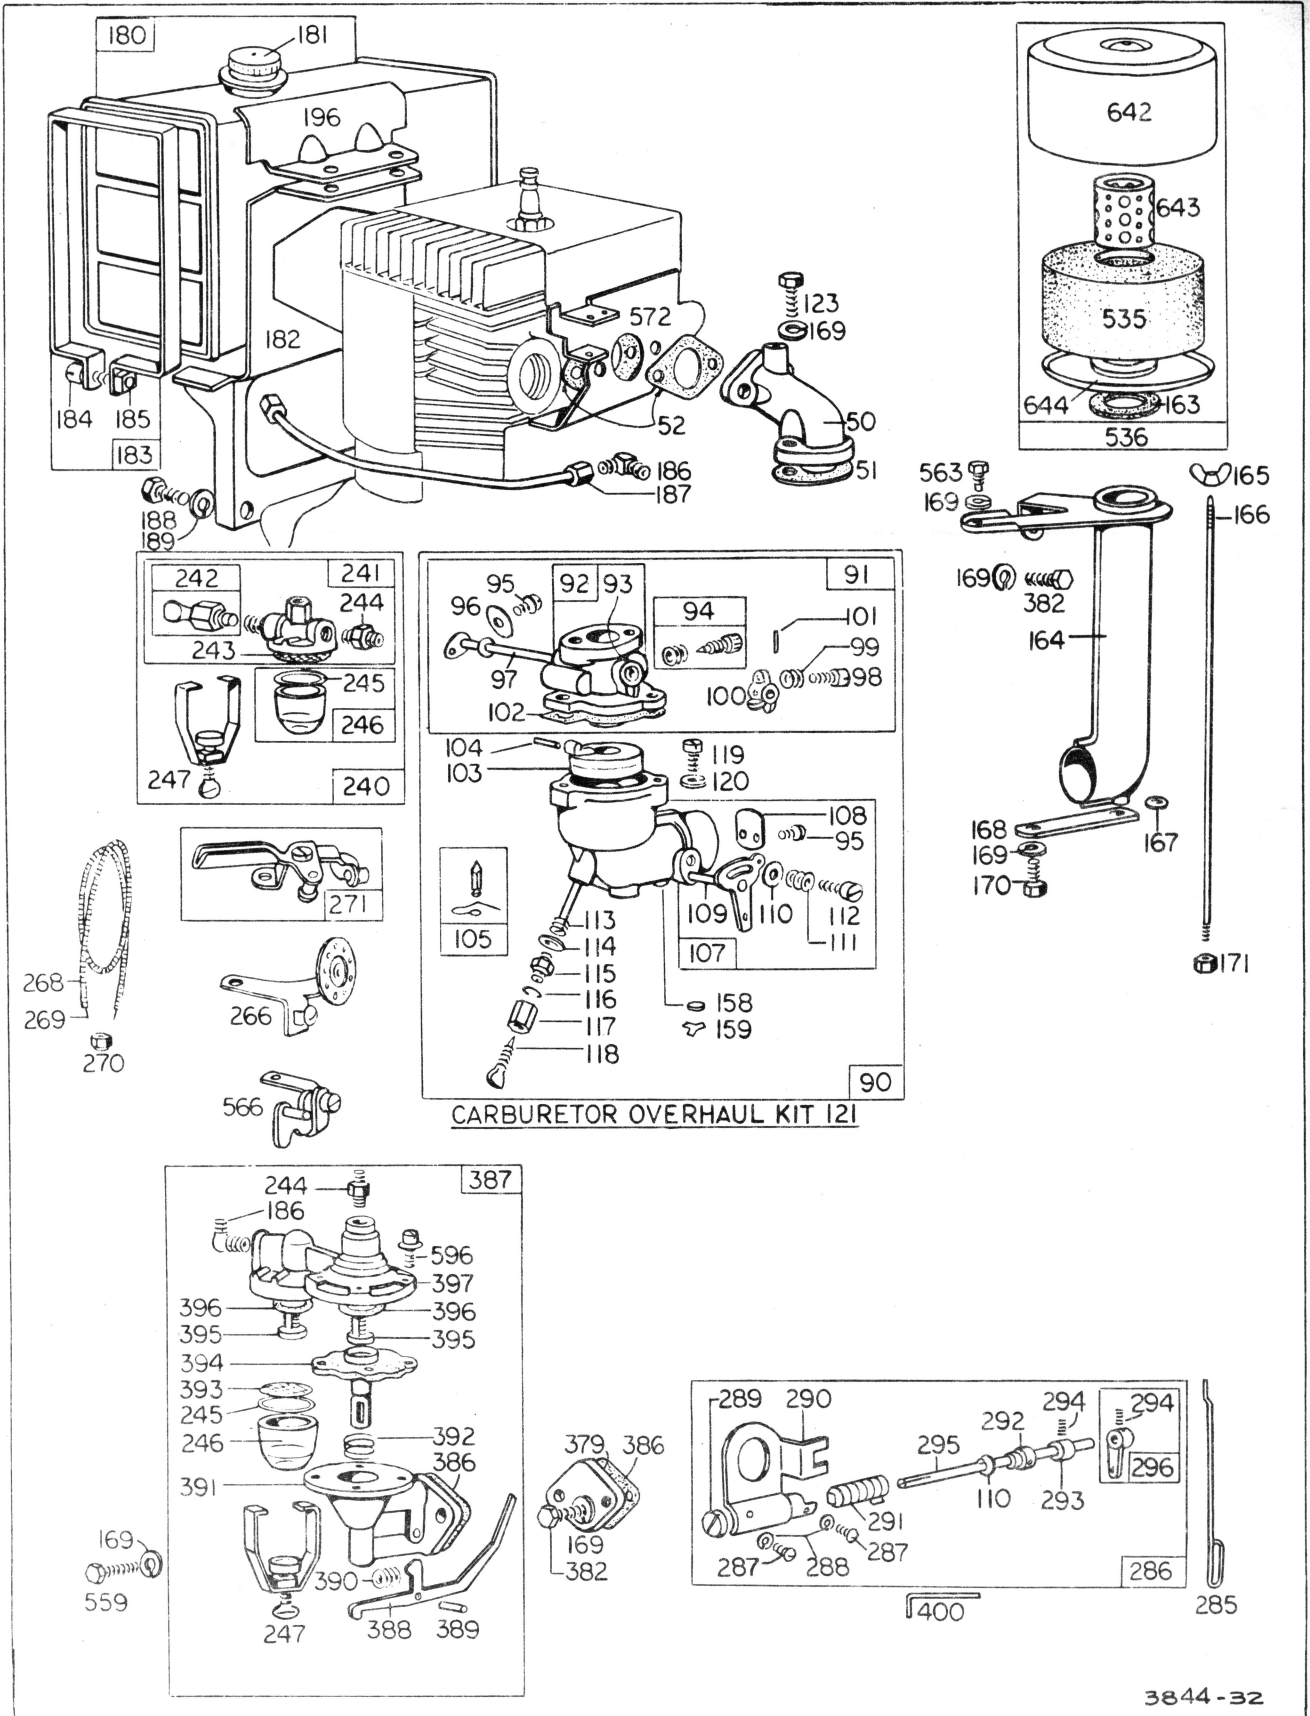

Assemblies include all parts shown in frames.

[illegible]

4

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	
1	294688	Cylinder Assembly		230397	Spacer (4)	34	23836	Valve—Intake	
	Note:	295014 Cylinder Assy. Used on type Nos. 0023, 0123, 0127, 0128, 0130, 0132, 0135.		93125	Screw (4)		Note:	23835 Valve	
				67632	Washer (4)			Used on type Nos. 0023, 0123, 0127, 0128, 0130, 0132, 0135.	
5	210620	Head—Cylinder			Used on Flywheel on type No. 0125.	35	65906	Spring—Intake Valve	
6	22963	Washer—Plain	25	294676	Piston Assy.—Standard	36	65906	Spring—Exhaust Valve	
7	*27752	Gasket—Cylinder Head		294677	Piston Assy.—.010" O.S.		Note:	26828 Spring—Exhaust Valve	
	Note:	Two 27752 Cylinder Head Gaskets are used on type No. 0129.		294678	Piston Assy.—.020" O.S.			Used on type Nos. 0023, 0127, 0128, 0130, 0132, 0135.	
8	297704	Breather		294679	Piston Assy.—.030" O.S.	40	68293	Retainer—Valve Spring Collar	
9	*66214	Gasket—Valve Cover			PISTON RING SETS:		Note:	292260 Rotocap—Exhaust Valve	
11	67068	Tube—Breather			Note: For Chrome Piston Ring Set — standard size — order Part No. 298746.			Used on type Nos. 0023, 0127, 0128, 0130, 0132, 0135.	
12	*66224	Gasket—Crankcase Cover	26	292100	Ring Set—Piston—Std. Includes: 210076 Ring—Piston, Comp., Top and Center, Standard	41	68283	Collar—Valve Spring	
14	91442	Screw—Cylinder Head			61292 Ring—Piston, Oil, Standard	45	63659	Tappet Valve	
	Note:	93358 Screw—Cap, Hex. Hd., 5/16-18 x 3-1/2" (2) 230705 Spacer (2) Used on type No. 0133.		292101	Ring Set—Piston—.010" O.S. Includes: 210077 Ring—Piston, Comp., Top and Center, .010" O.S. 61335 Ring—Piston, Oil, .010" O.S.	46	294699	Gear—Cam	
15	91084	Plug—Pipe—3/8"			210078 Ring—Piston, Comp., Top and Center, .020" O.S. 61336 Ring—Piston, Oil, .020" O.S.	50	21769	Elbow—Carburetor Intake	
	Note:	92817 Plug—Oil Drain Used on type Nos. 0132, 0135.		292102	Ring Set—Piston—.020" O.S. Includes: 210079 Ring—Piston, Comp., Top and Center, .030" O.S. 61337 Ring—Piston, Oil, .030" O.S.	51	†*65647	Gasket—Intake Elbow	
16	260775	Crankshaft			292103	Ring Set—Piston—.030" O.S. Includes: 210079 Ring—Piston, Comp., Top and Center, .030" O.S. 61337 Ring—Piston, Oil, .030" O.S.	52	*65647	Gasket—Intake Elbow Mounting
	Note:	260767 Crankshaft Used on type Nos. 0020, 0112, 0134. 260768 Crankshaft Used on type Nos. 0021, 0022, 0113, 0120, 0121, 0125, 0129, 0131. 260770 Crankshaft Used on type No. 0115. 260771 Crankshaft Used on type Nos. 0030, 0116, 0122, 0123, 0124, 0126, 0130, 0133. 260784 Crankshaft Used on type No. 0040. 260789 Crankshaft Used on type Nos. 0023, 0127, 0132. 260794 Crankshaft Used on type No. 0135.	27	68546	Lock—Piston Pin	79	291356	Case Assembly—Gear	
17	29530	Bearing—Ball	28	298401	Pin Assy.—Piston—Std. Pin Assembly—Piston—.005" O.S.		Note:	291676 Case Assy.—Gear Includes: 63382 Cup—Bearing 230012 Pin—Washer Ret. 220064 Washer—Thrust	
18	290724	Cover Assy.—Crankcase (Plain Bearing) Used only on Model 191401 to 191407 Engines.		294681				Used on type No. 0040.	
18A	291299	Cover Assy.—Crankcase (Ball Bearing) Used only on Model 191431 to 191437 Engines.	29	291234	Rod Assy.—Connecting For Connecting Rod with .020" undersize Crankpin Bore — order No. 298787.	81	220790	Lock—Gear Case Mounting Screw	
20	298423	Seal—Oil		Note:		83	291309	Shaft Assembly—Drive	
21	66768	Plug—Oil Filler					Note:	290638 Drive Shaft, Gear and Bearing Assembly Includes: 22723 Shim—.003" thick 22724 Shim—.010" thick	
	Note:	292495 Oil Filler Cap and Drain Plug Assy. Used on type Nos. 0132, 0135. 298859 Oil Minder Used on type No. 0133.	30	220871	Dipper—Connecting Rod			Used on type No. 0040.	
			31	22947	Lock—Conn. Rod Screw	85	91386	Screw—Gear Case Cover (2" long)	
			32	91162	Screw—Connecting Rod		Note:	92279 Screw—Gear Case Cover (1-1/2" long)	
			33	23835	Valve—Exhaust			Used on type No. 0132.	
23	291278	Flywheel—Magneto			Note: 26735 Valve—Exhaust Used on type Nos. 0023, 0123, 0127, 0128, 0130, 0132, 0135.		Note:	290574 Cover Assembly—Gear Case Includes: 22723 Shim—.003" thick 22724 Shim—.010" thick 63899 Cup—Bearing 69858 Seal—Oil	
	Note:	294743 Flywheel—Magneto Uses: 220804 Screen 220803 Support—Screen						Used on type No. 0040.	
						87	298423	Seal—Oil	

* Included in Gasket Set—Part No. 294736.

† Included in Carburetor Overhaul Kit—Part No. 291763.

* Included in Gasket Set—Part No. 294736.

† Included in Carburetor Overhaul Kit—Part No. 291763.

191400 to 191477

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
88	27328	Gasket—Gear Case Cover	117	†23118	Nut—Needle Valve Packing			Used on type Nos. 0123, 0124, 0125, 0135.
	Note:	68247 Gasket—Gear Case Cover	118	†230009	Valve—Needle	184	91257	Screw—Machine, Fill. Hd. —1/4-20 x 1-1/4"
89	91488	Plug—Sq. Hd., 1/8", Pipe		Note:	230085 Valve—Needle	185	90970	Nut—Square—1/4-20
90	293950	Carburetor Assembly	119	90746	Used on type No. 0129. Screw—Machine, Fill. Hd. —10-32 x 5/8"	186	63377	Connector—Fuel Pipe
	Note:	291427 Carburetor Assy. Used on type No. 0023. 292106 Carburetor Assy. Used on type No. 0129. 294940 Carburetor Assy. Used on type Nos. 0127, 0132.	120	92290	Washer—Lock—No. 10 x 1/16 x 3/64"		Note:	67218 Connector—Fuel Pipe
91	291655	Body Assembly—Upper Carburetor		Note:	92813 Washer—Lock—Shakeproof			Used on type Nos. 0022, 0125, 0127, 0133.
92	99375	Body—Upper Carburetor	121	291763	Carburetor Overhaul Kit	187	29476	Pipe—Fuel
93	23108	Bushing—Throttle Shaft	123	90700	Screw—Cap, Hex. Hd. —1/4-20 x 3/4"		Note:	29025 Pipe—Fuel—18" long
94	†292681	Valve Assembly—Carburetor Idle	158	27590	Filter—Carburetor Drain			89248 Pipe—Fuel—2-1/4" long
95	93038	Screw—Choke and Throttle Valve Mtg. Sem	159	220521	Retainer—Carburetor Drain Filter			92655 Tee—Pipe Fitting
96	62940	Valve—Throttle	163	*67247	Gasket—Air Cleaner Mtg. Pipe Assy.—Air Cleaner			Used on type Nos. 0129. 99591 Pipe—Fuel—14-3/4" long
97	291300	Shaft Assy.—Throttle	164	291462	Note: 296036 Pipe Assembly—Air Cleaner			Used between Carburetor and Fuel Pump on type Nos. 0127, 0132.
98	91920	Screw—Machine, Fill. Hd. —8-32 x 5/8"			Used on type No. 0133.			293006 Pipe—Fuel—12" long
99	26157	Spring—Throttle Adjustment	165	92650	Nut—Wing			Used on type Nos. 0124, 0130.
100	61967	Stop—Throttle	166	230739	Stud—Air Cleaner			299942 Pipe—Fuel (Flexible)
101	93043	Pin—Throttle Lever		Note:	23870 Stud—Air Cleaner			Uses: 93053 Clamps
102	†27034	Gasket—Carburetor Body			Used on type No. 0120. 230768 Stud—Air Cleaner			Used on type Nos. 0022, 0125.
103	99333	Float—Carburetor	167	66648	Gasket—Air Cleaner Stud			296004 Pipe—Fuel (Flexible)
104	†230896	Pin—Float Hinge	168	22832	Strap—Air Cleaner Pipe			Uses: 93053 Clamps
105	299096	Valve—Fuel Inlet	169	90832	Washer—Lock—1/4 x 3/32 x 5/64"			Used on type No. 0133.
107	89915	Body Assembly—Lower Carburetor		Note:	92778 Washer—Lock—Shakeproof	188	92272	Screw—Cap, Hex. Hd. —5/16-18 x 3/4"
	Note:	291472 Body Assy.—Lower Carburetor			Used to mount Blower Hsg. on type Nos. 0127, 0130, 0132, 0135.	189	90366	Washer—Lock—5/16 x 1/8 x 1/16"
		Used on type Nos. 0127, 0132.	170	91468	Screw—Cap, Hex. Hd. —1/4-20 x 3/8"	192	91397	Nut—Hex. —5/16-18
108	62872	Valve—Choke			Used on type No. 0129. 292415 Tank Assy.—Fuel	196	22907	Support—Upper Fuel Tank
	Note:	22954 Valve—Choke	171	92129	Nut—Hex. —1/4-28	201	26674	Link—Throttle
		Used on type Nos. 0127, 0132.	180	291488	Tank Assembly—Fuel (6 Quart)	204	23849	Bushing—Control Lever
109	89531	Shaft and Lever—Choke		Note:	290816 Tank Assy.—Fuel (4 Quart)	206	21772	Nut—Governor Adjusting
	Note:	291440 Shaft, Vane and Lever Assy.—Automatic Choke			Used on type Nos. 0123, 0124, 0125, 0135.		Note:	93384 Nut—Governor Stop (2)
		291776 Lever Assy.—Automatic Choke			291513 Tank Assembly—Combination Fuel (6 Quart)			Used on type Nos. 0010, 0020, 0021, 0022, 0030, 0040.
		Includes: 91941 Screw—Machine, Fil. Hd. —8-32 x 7/16"			Used on type No. 0129. 292415 Tank Assy.—Fuel	208	23957	Rod—Governor Control
		Used on type Nos. 0127, 0132.			Used on type No. 0122. Cap—Fuel Tank		Note:	230039 Rod—Gov. Control
110	62899	Washer—Choke Lever	181	69221	Bracket—Fuel Tank			Used on type Nos. 0010, 0020, 0021, 0022, 0030, 0040.
111	26155	Spring—Choke Lever	182	22813	Bracket—Fuel Tank	209	26643	Spring—Governor
112	23123	Screw—Choke Lever		Note:	221435 Bracket	219	291192	Gear Assy.—Governor
113	†99345	Nozzle—Carburetor			92272 Screw—Cap, Hex. Hd. —5/16-18 x 3/4" (2)	223	22814	Lever—Governor Control
114	†68667	Gasket—Nozzle			90366 Washer—Lock (2)		Note:	Control Lever used on type No. 0133 is furnished by the equipment manufacturer.
115	†23117	Retainer—Needle Valve			22963 Washer—Plain (2)	225	291177	Shaft—Governor Gear
	Note:	292226 Retainer Assy.—Jet Needle			Used on type No. 0133. Strap Assy.—Fuel Tank	227	291365	Lever Assy.—Governor
		Used on type No. 0129.	183	291490	Strap Assy.—Fuel Tank	230	22826	Washer—Governor Crank
116	†68677	Packing—Needle Valve		Note:	291367 Strap Assembly—Fuel Tank			

* Included in Gasket Set—Part No. 294736.

† Included in Carburetor Overhaul Kit—Part No. 291763.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
240	99910	Filter Assembly—Fuel	291	26594	Thermostat	345	290882	Cover—Breaker
	Note:	295977 Filter Assy.—Fuel	292	23885	Support—Thermostat Shaft (Inner)		Note:	292397 Cover—Breaker
		Used on type No. 0133.	293	23884	Stop—Thermostat Shaft			Used on type Nos. 0127, 0130, 0132, 0135.
		297563 Outlet—Fuel Tank (Less Filter)	294	92678	Screw—Set, Socket Hd.—6-32 x 5/16"	346	90211	Screw—Breaker Cover Mounting
		Includes: 293934 Shut-Off Valve	295	23954	Shaft—Thermostat	347	220197	Switch—Stop
		Used on type Nos. 0022, 0125.	296	291044	Lever Assy.—Thermostat	353	92791	Washer—Lock—Shakeproof
		298090 Filter—Fuel	300	290933	Muffler—Exhaust	354	90576	Nut—Hex.—8-32
		Used in Fuel Pipe on type Nos. 0022, 0125.	301	91416	Nipple—Exhaust, Pipe		Note:	92794 Nut—Hex.—8-32
241	99909	Cover Assy.—Fuel Filter	302	91310	Locknut—Muffler			Used on type Nos. 0127, 0130, 0132, 0135.
	Note:	296019 Cover Assy.—Fuel Filter	303	91296	Elbow—Exhaust 90°, Pipe	356	295413	Wire—Ground
		Used on type No. 0133.	304	291280	Housing—Blower	357	91540	Key—Pulley Mounting
		293934 Valve—Fuel Shut-Off		Note:	294144 Housing—Blower	358	294736	Gasket Set
		Used with Tank Outlet 297563 on type Nos. 0022, 0125.			Used on type Nos. 0130, 0132.	362	89742	Shield—Spark Plug
242	295913	Valve—Fuel Shut-Off			294742 Housing—Blower		Note:	66538 Elbow—Spark Plug
	Note:	293934 Valve—Fuel Shut-Off			Used on type No. 0125.			Used on type No. 0125.
		Used with Tank Outlet 297563 on type Nos. 0022, 0125.	306	220861	Shield—Cylinder	363	19068	Pulley—Flywheel (Optional Accessory)
243	22547	Screen—Fuel Filter	308	294683	Cover—Cylinder Head	374	92813	Washer—Lock—Shakeproof No. 1210-06
244	53029	Connector—Fuel Pipe	321	211166	Pulley—V-Belt Starter	375	292021	Point Set—Breaker
	Note:	67218 Connector—Fuel Pipe	323	66828	Belt—Vee	379	22984	Cover—Fuel Pump Hole
		Used on type Nos. 0022, 0133.	325	299308	Pulley—Electric Starter (With Screen)	380	62199	Washer—Plain
		230318 Connector—Fuel Pipe	328	221531	Guard—Belt	382	92666	Screw—Cap, Hex. Hd.—1/4-20 x 1/2"
		Used on type No. 0125.	329	93294	Screw—Belt Guard Mounting Sem	383	89838	Wrench—Spark Plug
245	*68477	Gasket—Fuel Filter Bowl	332	23949	Nut—Flywheel	386	27314	Gasket—Fuel Pump Mtg. and Hole Cover
246	298683	Bowl—Fuel Filter		Note:	92799 Nut—Pulley Mtg.	387	291493	Pump Assembly—Fuel
247	99665	Yoke Assy.—Fuel Filter			Used on type No. 0135.	388	220431	Lever—Fuel Pump
266	291460	Control—Throttle			230674 Nut—Flywheel	389	23783	Pin—Fuel Pump Lever
268	65616	Casing—Control Wire—72" long			Used on type Nos. 0131, 0133.	390	26616	Spring—Fuel Pump Lever
	Note:	If longer casing is required, specify length in inches; if shorter casing is needed, order No. 65616 and cut to required length.	333	290621	Armature and Support Assembly	391	21695	Body—Fuel Pump
				Note:	292318 Armature and Support Assembly	392	26588	Spring—Fuel Pump Diaphragm
					Used on type Nos. 0127, 0130, 0132, 0135.	393	22740	Screen—Fuel Pump Filter
269	26633	Wire—Control—78" long			Plug—Spark (with Gasket)	394	290622	Diaphragm—Fuel Pump
	Note:	If longer wire is required, specify length in inches; if shorter wire is needed, order No. 26633 and cut to required length.	337	29693	29693, 293322 and 293918 Spark Plugs use Ignition Cable Terminal No. 221798.	395	290623	Valve—Fuel Pump
				Note:	291954 Plug—Spark	396	66204	Gasket—Fuel Pump Valve
					Used on type Nos. 0130, 0135.	397	21694	Head—Fuel Pump
270	63426	Locknut—Control Wire Casing			293322 Plug—Spark	400	230010	Wrench—Socket Screw (Use for Ref. No. 294)
271	290568	Lever Assy.—Control			Used on type Nos. 0127, 0132.	492	296028	Starter—Generator (Delco-Remy No. 1101873)
	Note:	93062 Screw—Sem			293918 Plug—Spark			Uses: 296182 Pulley (Delco-Remy No. 1949358)
		Used to mount Control Lever on type Nos. 0123, 0124, 0126.	338	29806	Gasket—Spark Plug	493	211153	Bracket—Starter
285	26684	Link—Choke	339	291447	Box Assy.—Ignition Breaker	497	91203	Screw—Cap, Hex. Hd.—5/16-18 x 1-3/4"
286	291445	Thermostat Assembly		Note:	293222 Box Assy.—Ignition Breaker	500	91325	Washer—Plain
287	90050	Screw—Machine, Rd. Hd.—6-32 x 1/4"			Used on type Nos. 0127, 0130, 0132, 0135.	501	295924	Regulator—Voltage (Delco-Remy No. 1118988)
288	90362	Washer—Lock—No. 6 x 3/64 x 1/32"	343	291369	Condenser	506	90072	Screw—Machine, Rd. Hd.—8-32 x 5/8"
289	23886	Support—Thermostat Shaft (Outer)		Note:	292227 Condenser		Note:	92786 Screw—Machine, Rd. Hd.—8-32 x 5/8"
290	291444	Tube Assy.—Thermostat			Used on type Nos. 0127, 0130, 0132, 0135.	507	66895	Insulator
						517	22809	Pulley—Rope Starter
							Note:	210150 Pulley—Starter
								Used on type No. 0135.

* Included in Gasket Set—Part No. 294736.

191400 to 191477

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
518	69932	Rope—Starter		Note:	291378 Support Assembly—	669	297187	Bracket—Guard
	Note:	295904 Rope—Starter			Ball Bearing	692	26719	Spring—Spark Advance
		Used on type No. 0133.			Used only on Model	693	291727	Weight—Spark Advance
521	291508	Shielding—Ignition Cable			191431 to 191437	694	91324	Washer—Guard to Brkt.
	Note:	293195 Shielding Assy.—			Engines	695	91146	Screw—Cap, Hex. Hd.—
		Ignition Cable	572	291476	Guide—Front Air			1/4-20 x 7/8"
		Includes: 292412 Elbow—	573	291211	Plate—Back	696	92269	Key—Woodruff
		Ignition Cable		Note:	293201 Plate—Back	697	93186	Screw—Cap—Socket Head
		Uses: 26487 Clamp—			Includes: 92786 Screw—	698	295128	Clamp Assembly—Rotor
		Shielding			Machine,	699	291363	Rotor Assembly
		66298 Bushing—			Rd. Hd.—	700	290880	Coil—Magneto
		Spark Plug Term.			8-32 x 5/8"		Note:	293013 Coil—Magneto
		92704 Terminal—			92794 Nut—			Used on type Nos. 0127,
		Spark Plug			Hex., 8-32			0130, 0132, 0135.
		92864 Washer—			92864 Washer—	701	22859	Retainer—Coil
		Lock			Lock—		Note:	220245 Retainer—Coil
		(Shielding Lead)			Shakeproof			Used on type Nos. 0127,
		92794 Nut—Hex.			Used on type Nos. 0127,			0130, 0132, 0135.
		(Shielding Lead)			0130, 0132, 0135.	702	290614	Core—Coil
		220509 Clip—	586	22906	Lock—Flywheel Nut		Note:	292319 Core—Coil
		Shielding Support	590	92578	Screw—Breaker Box Mtg.			Used on type Nos. 0127,
		Used on type Nos. 0127,	591	65932	Plug—Camshaft			0130, 0132, 0135.
		0130, 0132, 0135.	592	90356	Nut—Hex.—10-24	703	22928	Clip—Armature Spring
535	270093	Element—Air Cleaner	593	*27295	Gasket—Plain or Ball		Note:	220244 Clip—Armature
536	297869	Cleaner—Air			Bearing Support—			Spring
	Note:	291858 Cleaner—Air			.020" thick			Used on type Nos. 0127,
		Used on type No. 0120.			*27296 Gasket—Plain or Ball			0130, 0132, 0135.
550	*22353	Washer—Valve Cover			Bearing Support—	704	90923	Screw—Sheet Metal,
551	22795	Cover—Valve			.005" thick			Rd. Hd., Type "A"—
552	23837	Bushing—Governor Crank			*27297 Gasket—Plain or Ball			No. 6 x 1/4"
553	62222	Cup—Valve Spring			Bearing Support—	705	92581	Nut—Hex.—6-40
554	66203	Shaft—Cam			.009" thick	706	22787	Washer—Breaker Plate
556	90887	Screw—Cap, Hex. Hd.—	594	91449	Screw—Bracket Mtg.	707	90367	Washer—Lock—
		3/8-16 x 1-1/4"	596	93347	Screw—Fuel Pump Head			No. 8 x 5/64 x 1/32"
557	92636	Screw—Cap, Hex. Hd.—			Mounting Sem		Note:	27991 Washer—Lock—
		1/2-20 x 2"			Bracket—Support			Shakeproof
558	92268	Washer—Lock—	605	297171	Strap—Adjusting			Used to mount Condenser
		3/8 x 1/8 x 3/32"	606	221471	Washer—Lock			on type Nos. 0127, 0130,
559	91422	Screw—Cap, Hex. Hd.—	636	92864	Washer—Back Plate			0132, 0135.
		1/4-20 x 5/8"	637	66154	Terminal (2)	708	291106	Seal—Oil
560	91984	Pin—Cotter—		Note:	66364 Washer—Back	709	23829	Eccentric
		1/16 x 1/2" long			Plate Terminal (2)	710	21802	Bushing—Oil Seal Clamp
562	92613	Bolt—Governor Lever			Used on type Nos. 0127,	711	90067	Screw—Machine, Rd.
563	92863	Screw—Self Tapping, Hex.			0130, 0132, 0135.			Hd.—8-32 x 5/16"
		Hd.—1/4-20 x 5/8"	638	26404	Washer—Back Plate Term.	712	291370	Shaft Assembly—Breaker
564	92980	Screw—Cap, Hex. Hd.—		Note:	220282 Washer—Back	713	66078	Bushing—Breaker Plate
		1/4-20 x 1/2"			Plate Terminal			Pivot
565	93142	Screw—Bracket to Base			Used on type Nos. 0127,		Note:	66338 Bushing—Breaker
		Mounting			0130, 0132, 0135.			Plate Pivot
566	99458	Idling Device	639	27299	Gasket—Breaker Cover			Used on type Nos. 0127,
567	291364	Crank Assy.—Governor	640	290930	Lead—Primary			0130, 0132, 0135.
568	290935	Base Assy.—Engine		Note:	293197 Lead—Primary	714	66048	Plate—Insulator
	Note:	21897 Base—Engine			Used on type Nos. 0127,		Note:	66318 Plate Insulator
		Uses: 89859 Nipple—			0130, 0132, 0135.			Used on type Nos. 0127,
		Oil Filler			Cover—Air Cleaner			0130, 0132, 0135.
		Used on type Nos. 0132,	642	221468	Cup—Air Cleaner	715	92576	Screw—Machine, Hex.
		0135.	643	280001	Base—Air Cleaner			Hd.—8-32 x 3/16"
		294757 Base Assy.—	644	221466	Brace—Bracket	716	66068	Washer—Breaker Plate
		Engine	646	221472	Anchor—Link			Insulating
		Used on type No. 0022.	647	211154	Screw—Cap, Hex. Hd.—		Note:	66328 Washer—Breaker
		297574 Base Assy.—	648	91439	1/4-20 x 3/8"			Plate Insulating
		Engine			Screw—Cap, Hex. Hd.—			Used on type Nos. 0127,
		Used on type No. 0133.	649	93546	5/16-18 x 1-1/4"			0130, 0132, 0135.
569	*27293	Gasket—Engine Base	650	91814	Screw—Cap, Hex. Hd.—	717	290840	Crank—Starting
570	291377	Support Assembly—			3/8-16 x 2"	718	23850	Pin—Flywheel
		Plain Bearing	652	91162	Screw—Link Anchor Mtg.	762	297651	Electric Starter—
			653	91442	Screw—Pulley Mounting			Generator Kit—12 Volt

* Included in Gasket Set—Part No. 294736.